


Use Job number in GDS

If customer wants to have fluids added to a specific job on the work order this change must be made in OCPSettings.exe.

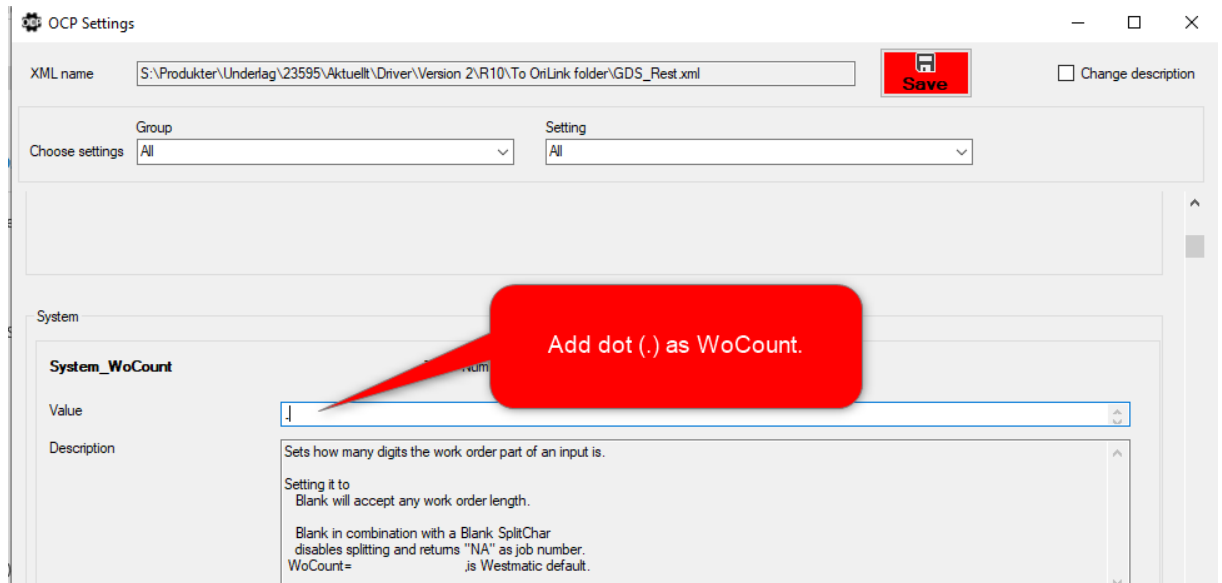

- 1.
2. Paste this to ForwardTransactions_Body

```
{  
  
    "recordtype" : "REC2",  
  
    "dealer": "%@dealer",  
  
    "branch": "%@branch",  
  
    "ordernumber": "%@07",  
  
    "partprefix": "%@pr",  
  
    "partoperation": "%@23",  
  
    "quantity": "%@9d1",  
  
    "orderjobno": "%@17"  
  
}
```

OCF Settings

XML name

S:\Produkter\Underlag\23595\Aktuellt\Driver\Version 1.0.0.5\R10\To OriLink folder\GDS_Rest.xml

Save

☐ Change description

Group

Setting

Choose settings

All

All

Description

Headers for ForwardTransaction call. use %@AT as parameter for AccessToken.

OBS! Each header must be seperated by linebreak and type and value must be seperated by comma. Max 3 headers suported.

ForwardTransaction_Body

Type=JSON

Value

```
{
  "recordtype" : "REC2",
  "dealer": "%@dealer",
  "branch": "%@branch",
  "ordernumber": "%@07",
  "partprefix": "%@pr",
  "partoperation": "%@23",
  "quantity": "%@9d1",
  "orderjobno": "%@17"
}
```

Description

Body for ForwardTransaction call. Parameters that can be used are:
%@01 gives a Running number
%@01 gives 1, 2, 3, ..., 10, ..., 100, ..., 9999, 1
%@01 gives 1, 2, 3, ..., 10, ..., 100, ..., 9999, 1